

**AIKO Design Ltd.** Tel: 0191 296 4295 [www.aiko-design.co.uk](http://www.aiko-design.co.uk)


## Fitting Instructions- 2, 3 & 4 bar sets, with optional rear door guard, for-

### LDV Maxus

Thank you for choosing **Aiko Design** roof bars – we aim to produce a no-nonsense product so all you will need to install your bars are some 10 and 13mm spanners and a means to safely work at a comfortable height above your van without falling off (this would not only void your personal warranty, but it would make your mates laugh, too)

Here (*right*) is one of your brackets; they are not handed.

You can probably see how the brackets fit- they clamp onto the raised ridges on top of your van in a straightforward manner with an M6 bolt and flat washer on the front, and a Nyloc nut on the back.  
(*Below*)

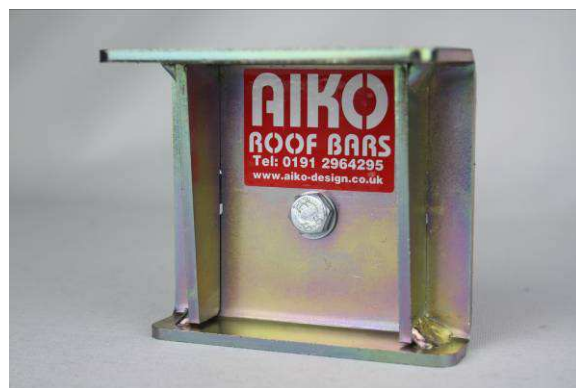

There's no need to over-tighten anything- once the spring washers are flat and the bracket is secure, you're good to go.

Next you can add your cross bars; these simply lay across the tops of your brackets, so making sure that you are happy that they

are evenly positioned left and right, drop your A-bolts over the top and do up the M8 Nyloc nuts as shown (*right*). Stop tightening the nuts just as the bars are nipped- if you bend up the corners of the bracket at all, you've gone way too far- so aim for no more than 10nm torque.

Finally, make sure that everything is secure and don't forget to give your rack periodic spanner-checks over the next week or so just in case it needs any settling down on the roof and that's it; we suggest a nice cup of tea at this stage, and perhaps a biscuit.

Hopefully you've had no bother but should you get stuck with anything please give us a call and we'll be happy to talk you through it.

**Cheers!**



**Note- Please check your vehicle manufacturer's handbook for the maximum recommended roof load**